

Service Information Sheet No. 46

REMOVAL OF SUMP

Agents are advised that in order to remove the sump of the "T" Series Midget, it is *not* first necessary to remove the front exhaust pipe or disconnect the steering, as described in the *Manual*. To remove the sump it is necessary only to remove the starter securing bolts, when the starter can be drawn out as far as it will go to give access to otherwise inaccessible sump securing bolts.