

SECTION K**DYNAMO****STARTER****DISTRIBUTOR****INSTRUMENT PANEL****AMMETER****SPEEDOMETER****REVOLUTION COUNTER AND CLOCK****OIL GAUGE****HARNESS CABLE****BATTERY****HORN****IGNITION COIL****REGULATOR BOX****WINDSCREEN WIPER****LAMPS**

DESCRIPTION	No. off per Car	Commencing Chassis No. TD0251		Part No.	Commencing Chassis No.	Part No.	Commencing Chassis No.	REMARKS
		Part No.	Illus. No.					
ENGINE ELECTRICAL EQUIPMENT								
Dynamo	1	X24419		X24469	E8142			
Band—cover	1	7H5029						
Brushes	set	7H5028						
Spring—brush tension	set	7H5031						
Bracket—commutator end	1	27H5428		27H5420	E8142			
Bearing—commutator end	1	7H5030		17H5407				
Bracket—drive end	1	7H5033		7H5388				
Bearing—drive end	1	97H626						
Armature	1	27H5429		37H5207	E8142			
Nut—shaft	1	7H5034						
Field coils	set	7H5071						
Bolt—through-fixing	2	301605						
Oiler	1	7H5527						
Sundry parts	set	7H5376						
Bracket—dynamo	1	X22853	F129					
Bolt—dynamo bracket	2	CA1122	F130					
Spring washer—bracket bolt	2	CA1283						
Swivel bolt—long—dynamo	1	QA11093						
Swivel bolt—short—dynamo	1	JA5052	F131					
Spring washer—bolt	2	CA1283						
Nut—swivel bolt	2	CA1126	F134					
Adjusting link	1	X24416	F132					
Bolt—link	1	CA1122	F133					
Distance piece—link	1	X24417						
Dynamo locking bolt	1			168160	9408			
Washer for bolt	1			PWZ105				
Fan and blanking plate assembly	1	AEC82						
Pulley—dynamo	1	X24468	F135					
Starter	1	3H952						
Band—cover	1	7H5038						
Brushes	set	7H5040						
Spring—brush tension	set	7H5043						
Main spring	1	7H5045						
Pinion and barrel	1	7H5046						
Retaining spring—pinion	1	7H5047						
Cap—shaft	1	7H5039						
Bracket—commutator end	1	7H5041						
Bearing—commutator end	1	7H5042						
Nut—shaft	1	7H5044						
Bracket—drive end	1	7H5048						
Bearing—drive end	1	AJB5068						
Armature	1	7H5050						
Field coils	set	7H5051						
Bolt—through-fixing	2	17H5444						
Sundry parts	set	7H5156						
Adaptor plate—starter	1	7H5159						
Cap for shaft end	1	7H5074						
Bolt—starter to block	3	CA1095						
Spring washer	3	CA1284						
Distributor	1	27H5204		168489	24489			
Cap	1	7H5161		301581				
Clip—cap	2	17H5055		17H5497				
Brush and spring	1	7H5085		17H5065				
Rotor arm	1	7H5086						
Contact set	1	7H5087						
Condenser	1	7H5088		17H5533	24489			
Contact breaker	1	27H5387						
Cam	1	7H5089		17H5500	24489			

SERVICE PARTS LIST

M.G. MIDGET (SERIES "TD")

DESCRIPTION	No. off per Car	Commencing Chassis No. TD0251		Part No.	Commencing Chassis No.	Part No.	Commencing Chassis No.	REMARKS	
		Part No.	Illus. No.						
Engine Electrical Equipment—continued									
Distributor									
Springs—automatic advance	set	27H5071		27H5430	} 24489				
Weights	set	7H5231		17H5095					
Toggles	set	7H5595		17H5069					
Shaft and action plate		27H5070		17H5431					
Bearing—top		7H5093			} 24489				
Bearing—bottom		7H5094		17H5499					
Securing plate		67257		17H5502					
Drive gear		X24115							
Pin—drive gear		CB2257							
Adjusting clip		X22799							
Locking screw—distributor (clip to block)		QA11347							
Clamping cotter				163405	} 20942			Fin. at 20941	
Washer				164119					
Nut				AJD8104					
Spacer for cable		X22383							
Distributor earthing wire		X31173							
Distributor suppressor		X24464							
AMENDMENTS									
ELECTRICAL EQUIPMENT AND INSTRUMENTS									
Panel—instrument—complete		27H5223		500732	10779			} Fin. at 22370	
Panel—instrument—complete (LHD)		136687		500733	10751				
Panel—instrument—complete				500815	} 18883				
Panel—instrument—complete (LHD)				500816					
Panel—instrument—complete				500865	} 22371				
Panel—instrument—complete (LHD)				500866					
Plug button		500864							
Washer for plug button		138663							
Panel—bare—with socket holders		139016							
Switchbox		27H5059							
Ammeter		27H5139		500568	10779				
Horn and dipper switch		27H5106							
Horn switch				500851	} 18883				
Dipper switch—foot-operated				2H4969					
Dip switch bracket				500799					
Buffer				ADA803					
Panel light switch		2H1069							
Fog lamp switch		2H1069							
Ignition warning light		2H3827							
Bulb		2H4440							
Fuel warning light		37H5058							
Bulb		2H4440							
Cable—panel		300255		138538	18883				
Rheostat panel light switch				500727	RHD—				
Knob				138540	10779				
Grub screw				138541	LHD—				
					10751				

DESCRIPTION	No. off per Car	Commencing Chassis No. TD0251		Part No.	Commencing Chassis No.	Part No.	Commencing Chassis No.	REMARKS
		Part No.	Illus. No.					
Electrical Equipment and Instruments—continued								
Bulb holder—panel illumination	3	27H5154						} Always quote key number when ordering replacements
Bulb—panel illumination	4	2H4732						
Flasher warning light	1			138632	} 22371			
Trafficator switch bracket	1			271261				
Ignition barrel lock with key	1	7H9830						
Key for ignition	1	ANK4646						
Speedometer (miles)								
Glass—speedometer	1	27H224		500527	10779	500616	17548	
Rubber packing—internal	1	27H19		AJC5065	10779			
Rubber packing—external	1	27H20						
Rim—glass	1	27H21						
Clamp—speedometer	1	27H22		301171	} 10779			
Nut—clamp	1	27H23		301172				
Cable assembly — speedometer (5' 6" long)	1	300220						
Cable—inner	1	300249						
Cable—outer	1	300250						
Revolution counter and electric clock								
Glass	1	300222		500529	} 10751			
Rubber packing—internal	1	27H19		AJC5065				
Rubber packing—external	1	27H20						
Rim—glass	1	27H21						
Clamp—revolution counter	1	27H22		301171	} 10751			
Nut—clamp	2	27H23		301172				
Clock	1	27H7						
Cable—revolution counter	1	300248		301174	10751			
Cable—inner	1	27H209						
Cable—outer	1	27H24						
Reduction box for revolution counter on dynamo	1	27H25						
Attachment	1	27H210						
Driving spindle	1	27H211						
Nut	1	27H26						
Collar	1	27H27						
Sleeve	1	27H28						
Screw for collar	1	27H29						
Clip—revolution counter cable	1	27H30						
Grommet—revolution counter drive	1	82149						
Bush	1	134995						
Oil pressure gauge	1	84578						
Glass—oil gauge	1	27H226						} Fin. at 13913
Rubber packing—glass	1	27H10						
Rim—oil gauge glass	1	27H11						
Water temperature and oil pressure gauge	1	27H12						
Adaptor	1	500154		500553				
Washer	1			500611				
Clip	3			500612	} 13914			
Grommet	1			81738				
Oil gauge pipe assembly	1	136715		H7467	} 10479			
Flexible connection—oil gauge	1		F136	500567				
Connector—oil pipe	1		F137	83866				
Grommet—oil gauge pipe	1	83875						
Grommet—oil gauge pipe	1	84138						
Grommet—oil gauge pipe	1	91213						

DESCRIPTION	No. off per Car	Commencing Chassis No. TD0251		Part No.	Commencing Chassis No.	Part No.	Commencing Chassis No.	REMARKS
		Part No.	Illus. No.					
Electrical Equipment and Instruments—continued								
Harness cable—complete	1	500133		500563	8142			
Harness cable—complete	1			500824	19300			
Harness cable—complete (LHD)	1			500852	19900			
Harness cable—main	1	500126		500615	8142			
Harness cable—main	1			500848	19300			
Harness cable—main (LHD)	1			500853	19900			
Harness cable—tail	1	500127		500849	19300			
Harness cable—tail (LHD)	1			500854	19900			
Harness cable—flasher (N.A.) (LHD)	1			500855	19900			
Lead—battery—positive to earth	1	500128						
Lead—battery—negative to starter switch	1	500129						
Lead—battery—starter switch to starter	1	500130						
Lead—battery—engine to earth	1	500131						
Cable—dipper switch (LHD)	1			500856	19900			
Grommet—harness through dash	1	51134						
Clip—harness to side-member	8	95100						
Clip—harness to frame stiffener	1	95104						
Clip—harness to front frame	1	95104						
Clip—harness to front extension—near-side	2	5088						
Clip—harness to dash	1	51181						
Clip—harness to steering rack	2	ACH8650						
Clip—harness to dash	1	95174						
Banjo clip—tail lamp wire to cross-member	3	5873						
Clip—tail lamp wire to body	2	3161						
Clip—sidelamp cable	2	54347						
Clip—wiper wire	3	135671						
Clip—battery feed and starter switch cables	1	80492						
Clip—harness to dash support tube	2	81738						
Grommet—starter pull	1	86663						
Battery (GTWA) (12-volt)	1	N.S.P.						
Bolt—battery	2	136691						
Drip cups—battery	6	27H5084						
Clamp—battery	1	131957						
Base—battery box	1	133656						
Screw—battery lug	2	186111						
Tray—battery	1	183528		500805	18883			
Horn—low note	1	3H713						
Horn—high note	1	3H714						
Bracket	2	7H5291						
Cover	2	7H5124						
Contact set	2	7H5126						
Diaphragm	2	17H5002						
Resistance	2	17H5003						
Sundry parts	2 sets	17H5001						
Ignition coil	1	3H520						
Nut	2	17H5122						
Cap for coil	1	3H1835						
Regulator box	1	2H4929		17H5336	8142			
Cover	1	7H5522						
Clip	1	7H5128						


DESCRIPTION	No. off per Car	Commencing Chassis No. TD0251		Part No.	Commencing Chassis No.	Part No.	Commencing Chassis No.	REMARKS
		Part No.	Illus. No.					
Electrical Equipment and Instruments—continued								
Resistance	1	7H5066						
Fusebox	1			500562	} 8142			
Cover	1			7H5196				
Starter switch	1	3H949						
Bootee	1	500320						
Steering column—dummy horn-push	1	136865						
Motor—windscreen wiper	1	27H5087		138616	22315			
Cover	1	7H5367						
Brushes	set	27H5432		7H5368	22315			
Brush gear	1	27H5101						
Springs	set	27H5025						
Armature	1	7H5369						
Field coils	set	37H5500						
Wiper arm assembly—dual	1	A912						
Blade—R/H	1	27H5089						} Fin. at 22314
Blade—L/H	1	27H5089						
Arm only—R/H	1	301441						
Arm only—L/H	1	301442						
Bearing	1	27H5112						
Blade	1	27H5089						
Coupling bar	1	27H5011						
Wiper arm and blade assembly—R/H	1			138618				
Wiper arm and blade assembly—L/H	1			138617				
Arm—R/H	1			138666				
Arm—L/H	1			138667	22315			
Blade	2			27H5089				
Stop rubber	2			2H7954				
Coupling bar	1			138621				
Relay box	1	(LHD)		3H1454				
Flasher unit	1	(LHD)		11G9093				
Flasher unit switch less lever	1	(LHD)		AMK5607	22371			
Lever—flasher unit switch	1	(LHD)		AMK5608				
Grommet—wiper cable through dash	1			91213				
LAMPS								
Headlamp—dip left—c/p	2	300602		ACG5030	26180			
Headlamp—dip left—painted, with c/p rim	2	301017		ACG5030	26180			
Rim	2	17H5403						
Wire—fixing	2 sets	7H5167						
Light unit	2	7H5483						
Adaptor	2	7H5059		300603	7624			
Nut—fixing	2	27H5055						
Bulb	2	2H4743		3H1892	7624			
Headlamp—vertical dip—c/p	2	17H5225		ACG5031	26180			
Headlamp—vertical dip—painted, with c/p rim	2	301018		ACG5031	26180			
Rim	2	17H5403						
Wire—fixing	2 sets	7H5167						
Light unit	2	7H5485						
Adaptor	2	300603						
Nut—fixing	2	27H5055						
Bulb	2	3H921						
Headlamp—dip right—c/p (N.A.) (LHD)	2	300607		ACG5034	26180			
Headlamp—dip right—painted, with c/p rim (N.A.)	2	301019		ACG5034	26180			
Rim	2	17H5403						

DESCRIPTION	No. off per Car	Commencing Chassis No. TD0251		Part No.	Commencing Chassis No.	Part No.	Commencing Chassis No.	REMARKS
		Part No.	Illus. No.					
Lamps—continued								
Wire—fixing (LHD)	2 sets	7H5167						} Not North America
Adaptor (LHD)	2	300603		17H5244	26180			
Nut (LHD)	2	27H5055						
Headlamp—dip right—c/p (LHD)	2	300607		ACG5032	26180			
Headlamp—dip right—painted, with chrome rim	2	301019		ACG5032	26180			
Rim	2	17H5403						
Wire—fixing	2 sets	7H5167						
Light unit	2	7H5484						
Adaptor	2	300603						
Nut	2	27H5055						
Bulb	2	3H1893						
Headlamp—dip right—France (LHD)	2			ACG5033				} N. America Alternative to 2H1150
Rim	2			17H5403				
Wires—fixing	2 sets			7H5167	26180			
Light unit	2			7H5486				
Adaptor	2			7H5062				
Nut—fixing	2			27H5055				
Sidelamp assembly—c/p	2	2H1150						
Sidelamp assembly—c/p (LHD)	2			27H5192	22371			
Sidelamp—painted	2	301016						
Rim and glass	2	7H5217						
Screw—rim	2	27H5026						
Bulb holder	2	7H5539		27H5193	22371			
Bulb	2	2H4442		2H4915	(N.A.)			
Stop/tail lamp assembly	2	37H5381		3H1814	21303			
Rim	2	7H5297		7H5182				
Screw—fixing	4	139256						
Glass	2	7H5147		7H5183	21303			
Bulb holder	2	7H5111						
Cover	2	136884		7H5184	21303			
Bulb	2	1F9026						
Number-plate lamp	1	3H1813						
Cover	1	7H5185						
Glass	1	7H5121						
Sundries	set	7H5123						
Gasket—glass seating	1	7H5122						
Grommet—cable	1	7H5164						
Bulb	1	2H4817						
AMENDMENTS								
ELECTRICAL EQUIPMENT—OPTIONAL EXTRAS								
Fog lamp	1	27H5190						
Rim	1	7H5365						
Light unit	1	7H5320						
Screw—rim fixing	1	17H5042						
Wires—lamp unit fixing	set	17H5167						
Junction box	1	27H5191						
Nut—lamp fixing	1	27H5054						
Bulb	1	2H4743						

KEY TO PLATE F

Illus. No.	Description	Page No.
F1	Mounting rubber—engine—front.....	F.2
F2	Engine control link (L/H thread)	F.2
F3	Cup—link	F.2
F4	Link cup rubber.....	F.2
F5	Adjuster.....	F.2
F6	Engine control bracket	F.2
F7	Cylinder block complete	F.2
F8	Plug—oil feed hole	F.2
F9	Plug—oil hole—by-pass	F.2
F10	Oil seal cover	F.2
F11	Gasket—oil seal cover.....	F.2
F12	Bolt—cover	F.2
F13	Studs—cylinder head.....	F.2
F14	Water drain tap	F.2
F15	Washer—drain tap.....	F.2
F16	Stud—tappet cover	F.2
F17	Tappet inspection cover	F.3
F18	Joint—cover	F.3
F19	Nut—cover stud	F.3
F20	Washer—cover stud.....	F.3
F21	Breather pipe	F.3
F22	Bracket—breather pipe	F.3
F23	Bolt—breather pipe bracket	F.3
F24	Nut—breather pipe bracket.....	F.3
F25	Clip—breather pipe	F.3
F26	Bolt—breather pipe clip	F.3
F27	Nut—clip bolt	F.3
F28	Spring—oil filter—by-pass	F.3
F29	Ball—oil filter—by-pass	F.3
F30	Guide—ball	F.3
F31	Seat—ball.....	F.3
F32	Timing chaincase assembly	F.3
F33	Packing—chaincase	F.3
F34	Joint—chaincase to plate	F.3
F35	Bolt—long—chaincase to block	F.3
F36	Bolt—short—chaincase to block	F.3
F37	Bearer plate—front	F.3
F38	Joint—plate to block	F.3
F39	Bolt—plate to case	F.3
F40	Bolt—plate to block.....	F.3
F41	Bracket—plate	F.3
F42	Bolt—bracket	F.3
F43	Nut	F.3
F44	Spring washer	F.3
F45	Cylinder head (studded) with guides.....	F.5
F46	Stud—cover	F.5
F47	Stud—manifold	F.5
F48	Rear cover—cylinder head.....	F.6
F49	Joint—rear cover—plate	F.6
F50	Screw—rear cover—plate	F.6
F51	Water outlet pipe (studded)	F.6
F52	Stud—thermostat	F.6
F53	Bolt—water outlet pipe	F.6
F54	Joint—water outlet pipe	F.6
F55	Gasket—cylinder head	F.6
F56	Nut—securing cylinder head	F.6
F57	Cylinder head cover assembly.....	F.6
F58	Oil filler cap	F.6
F59	Joint—cylinder head cover	F.6
F60	Nut—cylinder head cover	F.6
F61	Washer—cylinder head cover	F.6
F62	Stud—exhaust manifold flange	F.6
F63	Nut—stud	F.6
F64	Joint—exhaust manifold	F.6
F65	Clamp—exhaust manifold.....	F.6
F66	Nut—exhaust manifold clamp	F.6
F67	Oil sump	G.2
F68	Drain plug—sump	G.2
F69	Washer—drain plug	G.2

Illus. No.	Description	Page No.
F70	Plug—oil hole	G.2
F71	Packing	G.2
F72	Joint—sump to block	G.2
F73	Bolt—sump—front	G.2
F74	Bolt—sump—short	G.2
F75	Bolt—sump—long	G.2
F76	Dipstick	G.2
F77	Suction filter assembly	G.2
F78	Filter gauze	G.2
F79	Spring—oil suction pipe	G.2
F80	Fibre washer	G.2
F81	Washer	G.2
F82	Joint—flange	G.2
F83	Bolt	G.2
F84	Oil pipe assembly—pump to filter.....	G.2
F85	Oil pump assembly—filter to block.....	G.2
F86	Bolt—banjo	G.2
F87	Washer—small	G.2
F88	Washer—large	G.2
F89	Oil filter	G.2
F90	Support bracket for oil filter	G.2
F91	Bolt—bracket	G.2
F92	Strap—oil filter bracket	G.2
F93	Bolt—strap	G.2
F94	Oil pump—bushed	G.2
F95	Bush—oil pump—body	G.2
F96	Oil pump cover with valve seat	G.2
F97	Bolt—cover—long	G.3
F98	Bolt—cover—medium	G.3
F99	Bolt—cover—short	G.3
F100	Lock washer	G.3
F101	Oil pump shaft and gear	G.3
F102	Gear—driving	G.3
F103	Key—driving gear	G.3
F104	Circlip—driving gear	G.3
F105	Oil pump gear (driven) with bush	G.3
F106	Bush—oil pump gear	G.3
F107	Spindle—driven gear	G.3
F108	Guide—relief valve ball	G.3
F109	Relief valve ball.....	G.3
F110	Spring—relief valve	G.3
F111	Cover plug—relief valve	G.3
F112	Washer—cover plug.....	G.3
F113	Joint—oil pump body.....	G.3
F114	Oil pipe—gallery to head.....	G.3
F115	Screw—banjo to head	G.3
F116	Screw—banjo to block	G.3
F117	Washer—screw	G.3
F118	Bracket—engine control link	G.4
F119	Engine control link (R/H thread)	G.4
F120	Rubber bush	G.4
F121	Cup washer	G.4
F122	Air cleaner	J.2
F123	Clip—air cleaner	J.2
F124	Wing nut—air cleaner stud	J.2
F125	Breather hose—air cleaner	J.2
F126	Clip—breather hose	J.2
F127	Pipe to air cleaner	J.2
F128	Joint—pipe to carburetter	J.2
F129	Bracket—dynamo	K.2
F130	Bolt—dynamo bracket	K.2
F131	Swivel bolt—short—dynamo	K.2
F132	Adjusting link	K.2
F133	Bolt—link	K.2
F134	Nut—swivel bolt	K.2
F135	Pulley—dynamo	K.2
F136	Flexible connection—oil gauge	K.3
F137	Connector—oil pipe	K.4

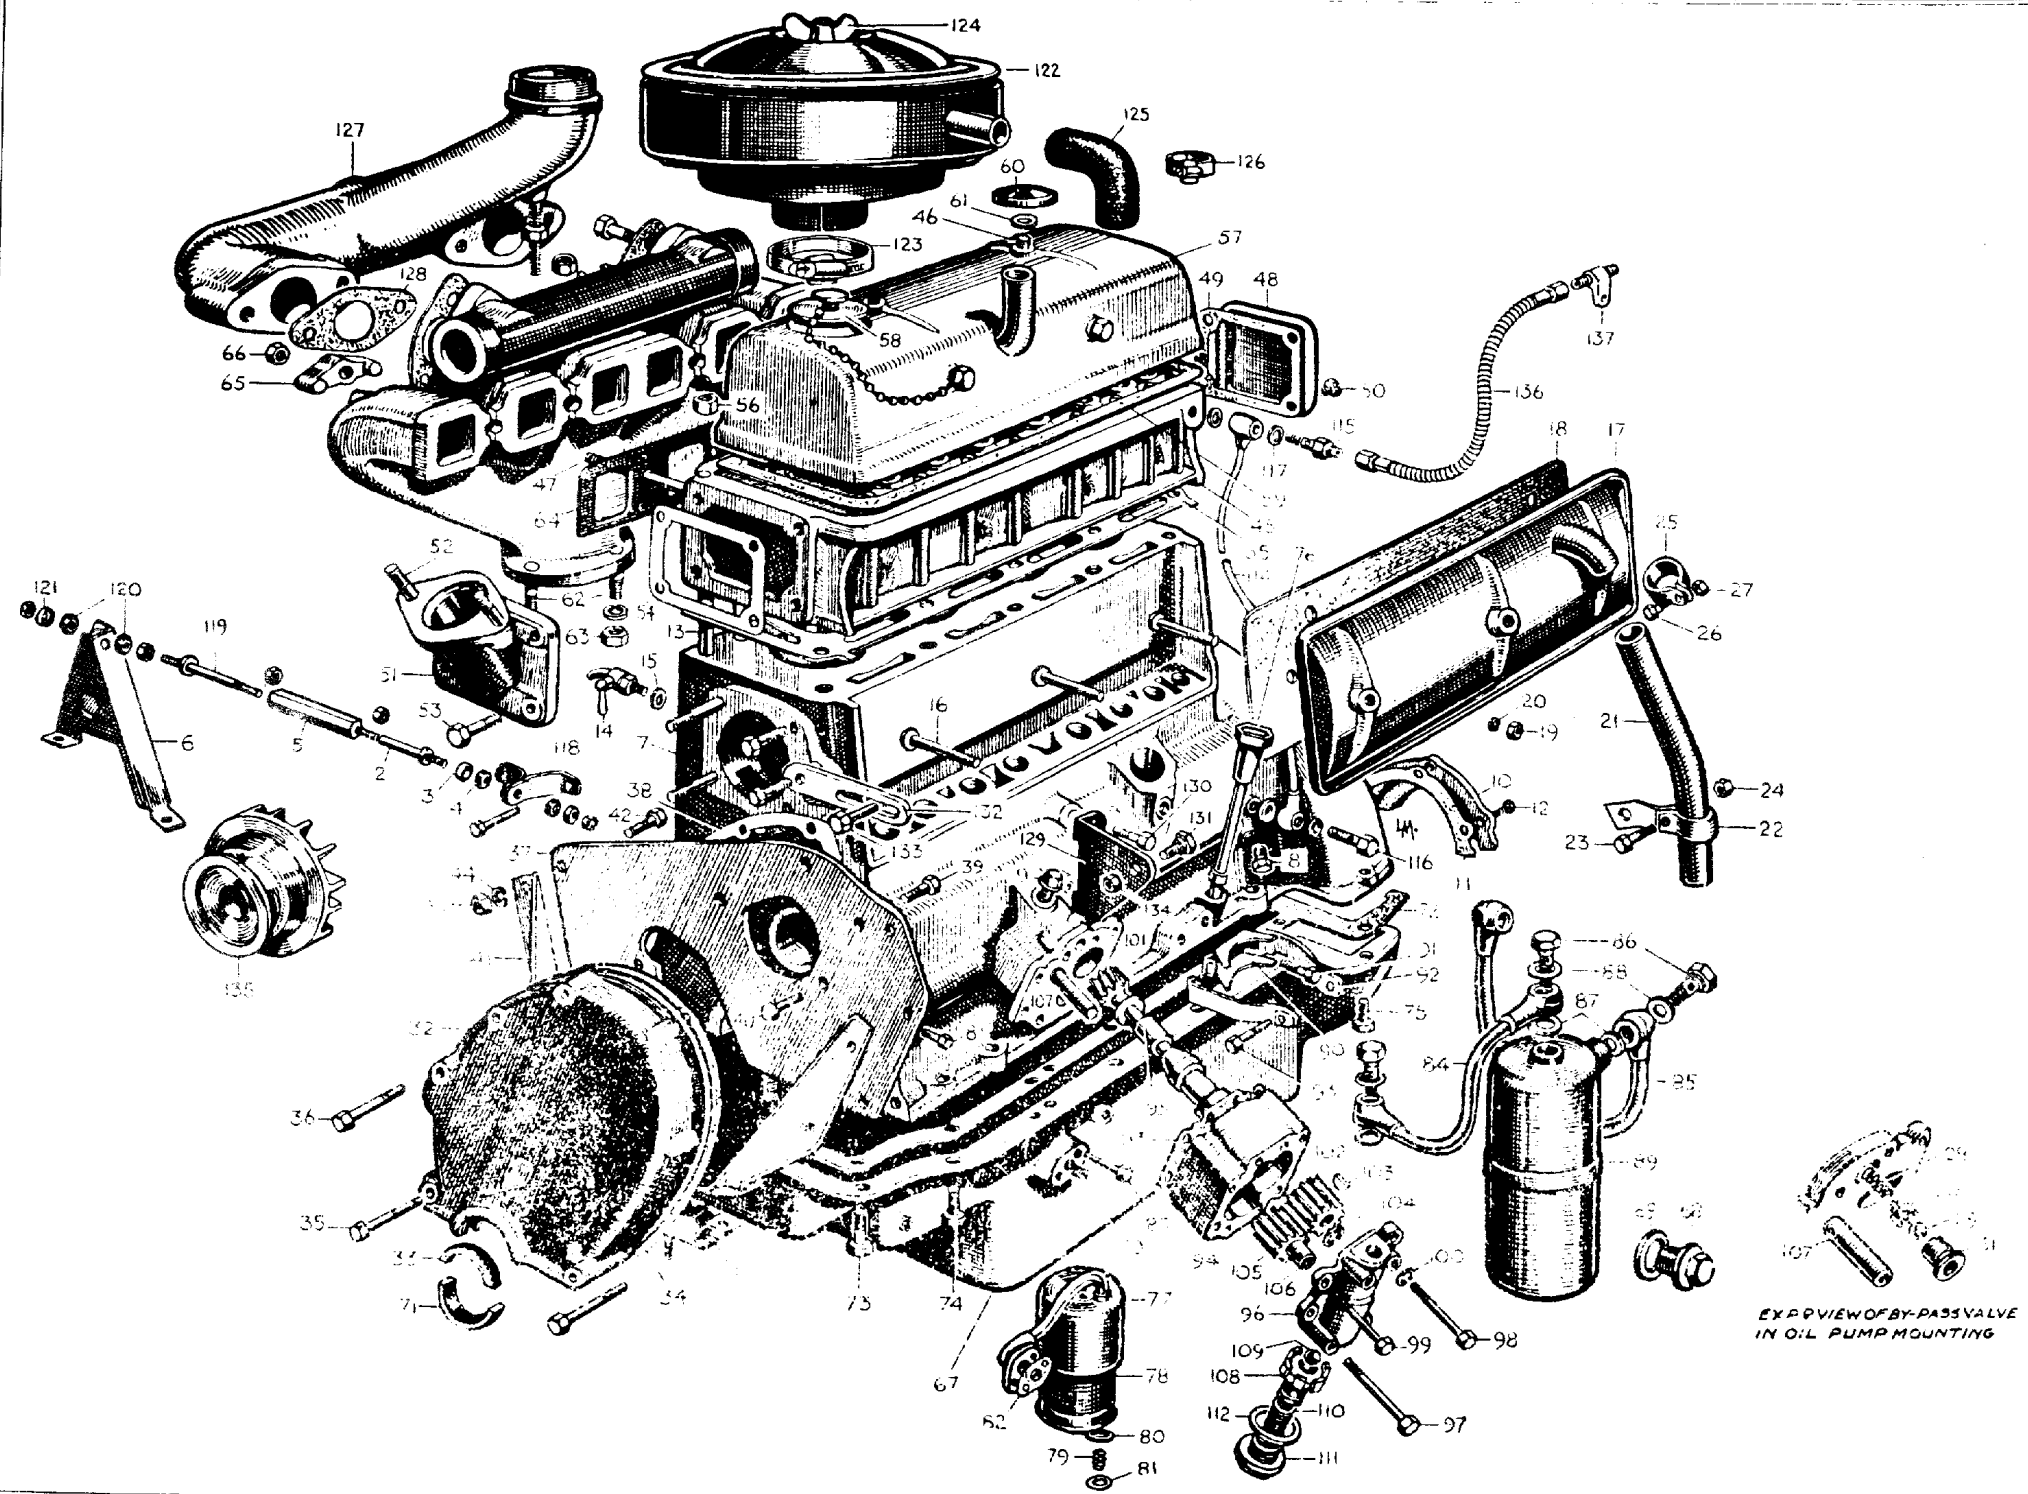

EXP. VIEW OF BY-PASS VALVE IN O.I.L. PUMP MOUNTING