

SECTION L



NUMBER-PLATES

BUMPERS

WINGS

RUNNING-BOARDS

FRONT APRON

REAR VALANCE

BONNET

SPARE WHEEL CARRIER

DESCRIPTION	No. off per Car	Commencing Chassis No. TD0251		Part No.	Commencing Chassis No.	Part No.	Commencing Chassis No.	REMARKS
		Part No.	Illus. No.					
NUMBER-PLATES								
Front number-plates	1	ACH5835						
Bracket—front number-plate	2	84225						
Rear number-plate	1	136292						
Holder—rear number-plate	1	135004						
Lamp bracket	1	136271						
Mounting bracket—rear number-plate	1	139084	A147					
Clamp—rear number-plate—mounting bracket	2	136269	A146					
Buffer—holder	1	85601						
¼" BSF × ½" Phillips recessed-head screw—number-plate to bracket	2	AJD144Z						
¼" BSF × ½" Phillips recessed-head screw—bracket to bumper	2	AJD144Z						
AMENDMENTS								
FRONT BUMPER								
Front bumper assembly	1	136037						
Bumper bar	1	500119						
Main spring	1	500120						
Bracket—bumper	2	500121						
Packing piece	4	500124						
Bolt	2	500143						
Over-rider	2	133602						
Distance tube	2	136307						
AMENDMENTS								
REAR BUMPER								
Rear bumper assembly	1	136201						
Bumper bar	1	500125						
Main spring	1	500123						
Bracket—bumper	2	500122						
Packing piece	5	500124						
Bolt	3	500143						
Over-rider	2	133602						
Distance piece	2	139718						
Bolt	1	500069						
AMENDMENTS								
WINGS								
Front wing—R/H	1	136901						
Front wing—L/H	1	136902						
Nut retainer	6	107308						
Piping—front wing (52")	2	AJJ3031						
Bracket—headlamp—R/H	1	136337						
Bracket—headlamp—L/H	1	136338						
Special bolt	2	81620						
Packing—headlamp bracket	2	81622						
Phillips recessed rd. head S/T screw—wing to body	6	PTZ804						

KEY TO PLATE A

Illus. No.	Description	Page No.
A1	Chassis frame complete	A.2
A2	Extension—front R/H—frame	A.2
A3	Extension—front L/H—frame	A.2
A4	Bracket—engine steady	A.2
A5	Bracket—engine mounting support	A.2
A6	Anchor—stay tube	A.2
A7	Bracket—frame stiffener—R/H	A.2
A8	Bracket—frame stiffener—L/H	A.2
A9	Bracket—engine mounting—rear	A.2
A10	Bracket—propeller shaft tunnel	A.2
A11	Bracket—exhaust pipe	A.2
A12	Bracket—exhaust pipe	A.2
A13	Bracket—centre—body mounting	A.2
A14	Bracket—front—rear spring—R/H	A.2
A15	Bracket—front—rear spring—L/H	A.2
A16	Bracket—rear—body mounting	A.2
A17	Bracket—rear—rear spring	A.2
A18	Mounting bracket—rear wing—R/H	A.2
A19	Mounting bracket—rear wing—L/H	A.2
A20	Mounting bracket—rear valance	A.2
A21	Stiffener bracket—R/H	A.2
A22	Stiffener bracket—L/H	A.2
A23	Stay tube assembly	A.2
A24	Fork end	A.2
A25	Dash stiffener assembly	A.2
A26	Gusset plate—dash stiffener	A.2
A27	Gusset plate—top—dash stiffener	A.2
A28	Steering knuckle—R/H	A.3
A29	Steering knuckle—L/H	A.3
A30	Swivel pin—R/H	A.3
A31	Swivel pin—L/H	A.3
A32	Link—swivel pin—upper R/H	A.3
A33	Link—swivel pin—upper L/H	A.3
A34	Plate—link	A.3
A35	Bush—link	A.3
A36	Link—swivel pin—lower R/H	A.3
A37	Link—swivel pin—lower L/H	A.3
A38	Seal—swivel pin	A.3
A39	Grease nipple ($\frac{1}{8}$ " \times 90°)—link	A.3
A40	Steering lever—R/H	A.3
A41	Steering lever—L/H	A.3
A42	Nut—Simmonds thin $\frac{1}{4}$ " BSF	A.3
A43	Key—Woodruff No. 8	A.3
A44	Nut—steering knuckle—R/H	A.3
A45	Nut—steering knuckle—L/H	A.3
A46	Felt washer—hub	A.3
A47	Grease retainer—hub	A.3
A48	Bearing hub—inner	A.3
A49	Bearing hub—outer	A.3
A50	Distance piece—hub	A.3
A51	Distance washer—hub	A.3
A52	Oil seal—hub	A.3
A53	Hub and brake-drum assembly—R/H front	A.3
A54	Wheel stud	A.3
A55	Damper complete—front	A.4
A56	Bolt—wishbone to link	A.4
A57	Link—distance tube	A.4
A58	Thrust washer—link	A.4
A59	Seal—link	A.4
A60	Support—link seal	A.4
A61	Spring coil	A.4
A62	Spring pan assembly	A.4
A63	Bottom wishbone assembly	A.4
A64	Wishbone pivot	A.4
A65	Bolt—wishbone to link	A.4
A66	Spigot for spring	A.4
A67	Check rubber	A.4
A68	Bush—bottom wishbone	A.4
A69	Washer—wishbone	A.4
A70	Main leaf complete with bush	A.5
A71	Bush—Silentbloc	A.5
A72	Second leaf	A.5
A73	Third leaf	A.5
A74	Fourth leaf complete with clips	A.6
A75	Leaf clips	A.6

Illus. No.	Description	Page No.
A76	Distance tube	A.6
A77	Fifth leaf	A.6
A78	Sixth leaf	A.6
A79	Seventh leaf	A.6
A80	Rubber pad	A.6
A81	Rubber—spring clip	A.6
A82	Bolt— $\frac{1}{4}$ " BSF	A.6
A83	Locating bolt	A.6
A84	Clip—rear spring	A.6
A85	Bracket—L/H—damper to rear spring	A.6
A86	Bracket—R/H—damper to rear spring	A.6
A87	Pin—rear spring front end	A.6
A88	Washer—Silentbloc	A.6
A89	Seating pad—rear spring	A.6
A90	Locating plate—rear spring	A.6
A91	Shackle plate	A.6
A92	Shackle pin	A.6
A93	Bush	A.6
A94	Damper complete—R/H	A.7
A95	Damper complete—L/H	A.7
A96	Radiator case (with medallion, grille, and false nose)	C.2
A97	Radiator false nose	C.2
A98	Medallion—M.G.—radiator	C.2
A99	Radiator grille	C.2
A100	Radiator film block complete (with tanks)	C.2
A101	Drain tap	C.2
A102	Filler cap—radiator	C.2
A103	Ring—rubber—filler cap	C.2
A104	Packing washer—radiator mounting	C.2
A105	Support member—radiator	C.2
A106	Stay tube—radiator—R/H	C.2
A107	Stay tube—radiator—L/H	C.2
A108	Yoke end—stay tube	C.2
A109	Hose—bottom—radiator	C.2
A110	Hose—top—radiator	C.2
A111	Clip—bottom hose	C.2
A112	Clip—top hose	C.2
A113	Drain pipe	C.2
A114	Exhaust system assembly	C.2
A115	Front pipe	C.2
A116	Silencer and rear pipe assembly	C.2
A117	Gasket—exhaust pipe flange	C.2
A118	Bracket—front support	C.2
A119	Support—tail pipe	C.2
A120	Petrol tank complete	C.3
A121	Drain plug—petrol tank	C.3
A122	Main feed adaptor	C.3
A123	Washer—drain plug and main feed	C.3
A124	Filler cap (Westwood) complete	C.3
A125	Trigger—cap	C.3
A126	End cover—petrol tank—L/H	C.3
A127	End cover—petrol tank—R/H	C.3
A128	Special bolt—tank end cover	C.3
A129	Pipe (between carburettors)	C.3
A130	Pipe—tank to pump—complete with washer and union washer	C.3
A131	Mounting bracket	C.3
A132	Rubber for mounting bracket	C.3
A133	Strap—petrol tank	C.3
A134	Packing—tank strap	C.3
A135	Rubber packing—tank to frame	C.3
A136	Pipe—pump to carburettors	C.3
A137	Petrol pump	J.2
A138	Elbow—petrol pump	J.2
A139	Check strap assembly—rear axle	A.5
A140	Check strap	A.5
A141	Buffer—check strap	A.5
A142	Rebound rubber—rear axle	A.5
A143	Spare wheel carrier bracket assembly	L.4
A144	Clamp bracket—lower—carrier	L.4
A145	Plug—spare wheel carrier	L.4
A146	Clamp—rear number-plate	L.2
A147	Mounting bracket—rear number-plate	L.2

THE  MIDGET (SERIES "TD")
CHASSIS AND RADIATOR DETAILS

PLATE A

SERVICE PARTS LIST

