



Service Information Sheet No. 61

STEERING ANGLES

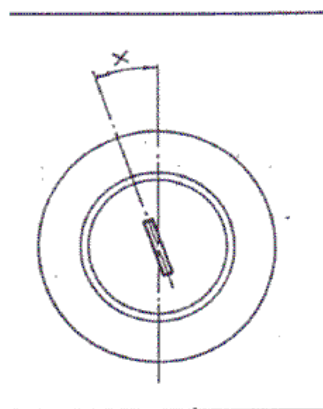

B = BEAM.
P = PACKING.
S = SPRING.

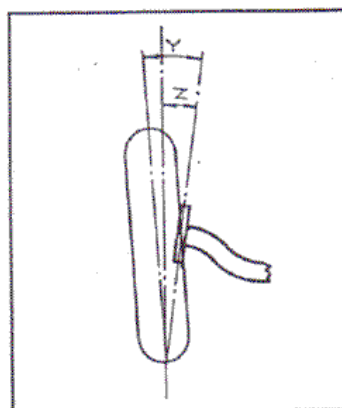

The following information has been compiled to assist service stations when checking the steering gear on the various models. It is not intended for use in repairing damaged steering parts and attention is drawn to Service Information Sheet No. 10 on this subject.

Model	Castor Angle "X"	Knuckle Angle "Y"	King Pin Angle "Z"
M	3° (B Nil—P 3°—S Nil)	9°	6½°
D, J, F	6° (B 3°—P Nil—S 3°)	9°	6½°
L	7° (B 3°—P 1°—S 3°)	9°	6½°
K, KN, TA ...	6° (B 3°—P Nil—S 3°)	10½°	7½°
P, PB	8½° (B 3°—P 2½°—S 3°)	9°	6½°
N	8° (B 3°—P 2°—S 3°)	10½°	7½°
SA	4° (B Nil—P Nil—S 4°)	10°	8°
VA	4½° (B Nil—P 1½°—S 3°)	10°	8°
WA	6° (B Nil—P 2°—S 4°)	10°	8°